


# S|CUBE SMART SYSTEMS & SERVICES PVT. LTD.


## Installation and User Instructions

### Telemetry Unit

#### Internal LCD

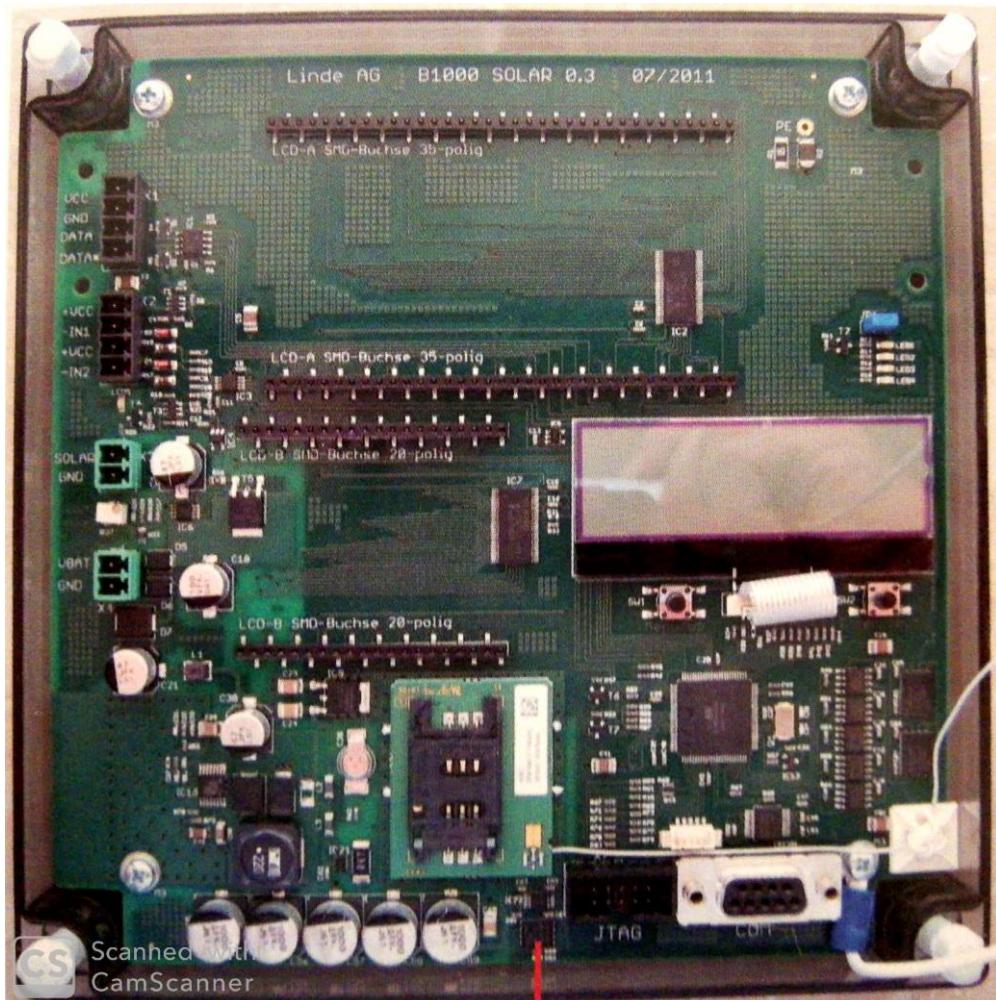


## Internal LCD - Operating Procedure

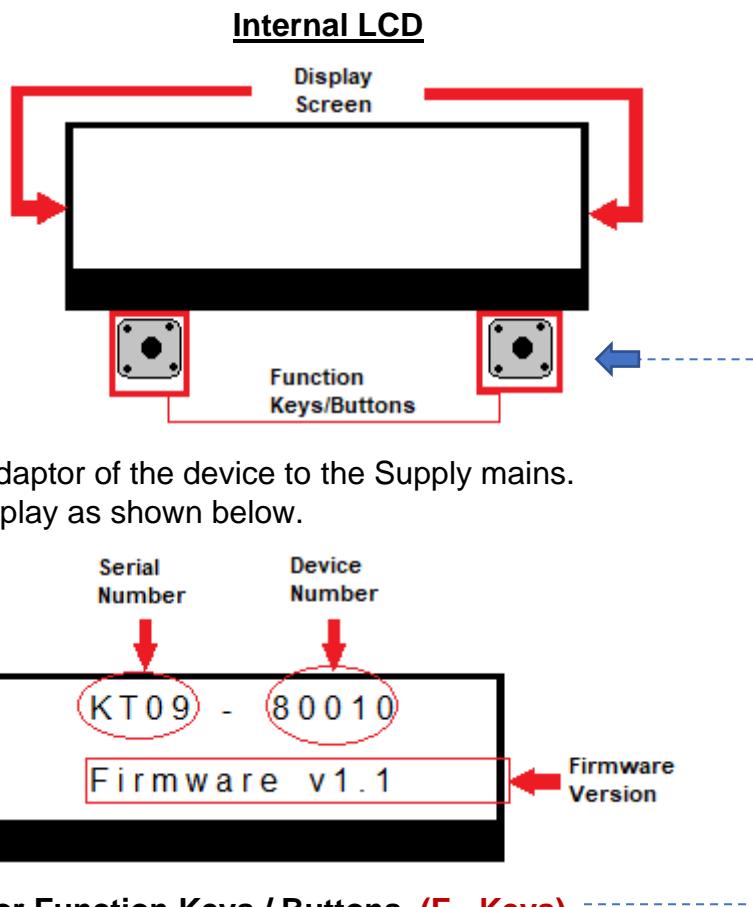

- Reference Table for Function Keys / Buttons (F - Keys)

F – Key Symbols	F – Key Symbol Meaning	Operation Mode
>	Press Right F-Key & DO NOT Hold	Increment Value
≥	Press Right F-Key and Hold (1 Sec)	Moves Cursor Forward
<	Press Left F-Key & Do not Hold	Decrement Value
≤	Press Left F-Key and Hold (1 sec)	Moves Cursor Backward
<>	Press both F-Keys together & DO NOT Hold	Enter / Move to Next Function
<>	Press both F-Keys together & Hold (2-3 Sec)	Exit / Move to Previous Function
>>	Press Right F-Key, Twice	
<>>	Press Both F-Keys, Twice	

Wait for a *STERIC SIGN* to appear at the *TOP LEFT* hand side of the display screen, this may take up to a couple of minutes approximately.

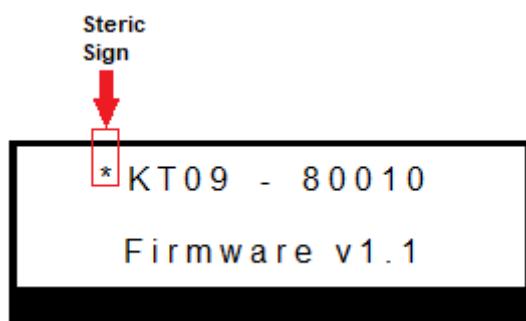


Upon seeing a Steric Sign [Press < > to] enter the menu.

- How to Enter Main Menu?


Function Details	Current Display	Press F-Keys	Resultant Display
Upon seeing the STERIC SIGN press the relevant F- Keys	* KT09 - 80010 Firmware v1.1	< >	Designed by Smartcube.pk
Introductory Display	Designed by Smartcube.pk	< >	Servicefunction 000 Code
Enter the Service Function Code	Servicefunction 000 Code	< >	Service Code Accepted_

- How to enter Service Function Code?

1. To switch from Introductory Display to Service Function Code, press the Enter Keys.
2. Use Increment / Decrement F – Keys to change the digit
3. Press and hold the Right F – Key (for approx. 1sec) to move the cursor Forward  
\*Press and hold the Left F – Key (for approx. 1sec) to move the cursor Backward.
4. After entering the three digit code, press the Enter Keys.
5. If the code entered is incorrect, you may receive an error message.

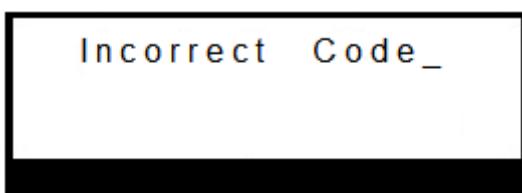

6. If the code entered is correct, the LCD shall display an acceptance message

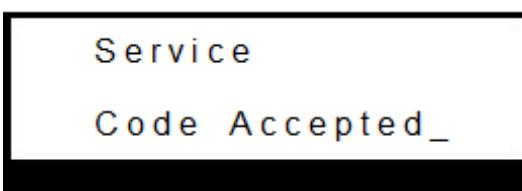


- Scrolling Within Main Menu

Function Details	Current Display	Press F-Keys	Resultant Display
Current Status of Actual Differential Pressure	act.diff.pressure 0.00 mbar_	< >	Signal Strength + CSQ: 25,0_
Current Signal Strength	Signal Strength + CSQ: 25,0_	< >	Remote Settings_
Parameter Configuration Menu	Remote Settings_	>	Event Settings_


- How to Set Parameters in Configuration Menu

Example for Remote Settings:




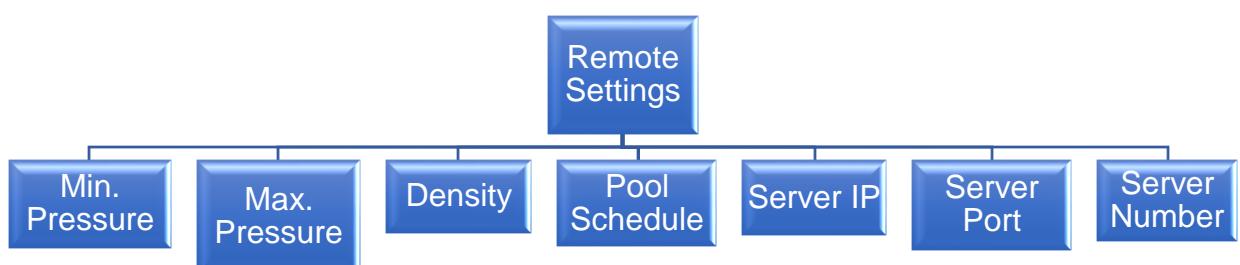


Function Details	Current Display	Press F-Keys	Resultant Display
Enter Remote Settings	Remote Settings_	< >	Min. Pressure_
To Scroll with-in Remote Settings menu use "increment/decrement" F – Keys			
Enter into any particular function.	Min. Pressure_	< >	Min. Pressure 0 mbar
Increment/Decrement to change the set value	Min. Pressure 0 mbar	>/<	
set and lock the newly changed value	Min. Pressure 2 mbar	< >	Min. Pressure 2 mbar
Exit and return to the Remote Menu	Min. Pressure 2 mbar	< >	Min. Pressure_
Repeat for configuring any Parameter in Remote Settings			

## Example for Event Settings:

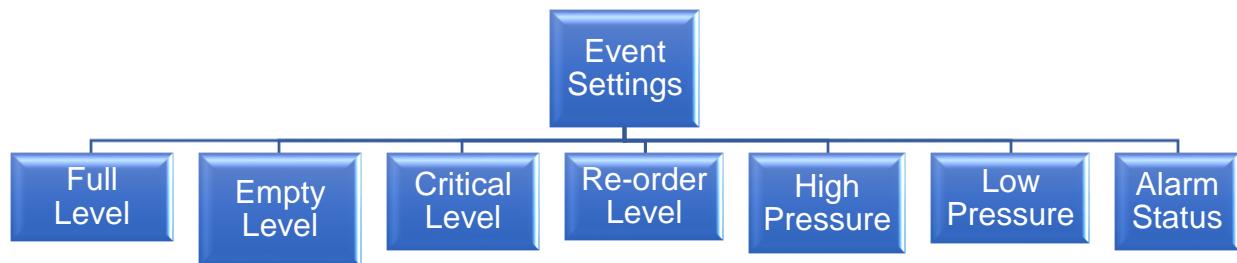

Function Details	Current Display	Press F-Keys	Resultant Display
Enter Remote Settings	Event Settings_	< >	Full Level_
To Scroll with-in Event Settings menu use "increment/decrement" F – Keys			
Enter into any particular function.	Full Level_	< >	Full Level >= % Status:off
Increment/Decrement to select 1 out of 6 condition symbols	Full Level (>=) % Status:off	>/<	Full Level ≥ % Status:off
Move cursor to new position	Full Level ≥ % Status:off	>/<	Full Level ≥ % Status:off
Set the alarm status	Full Level ≥ 95% Status:off	>/<	Full Level ≥ 95% Status:on

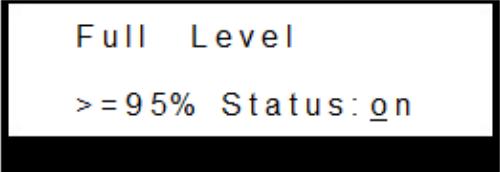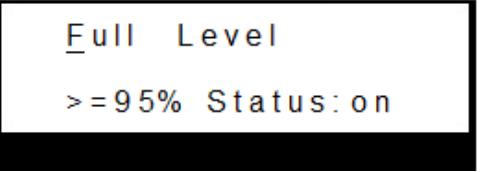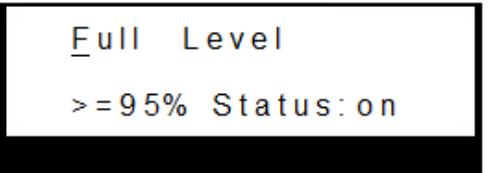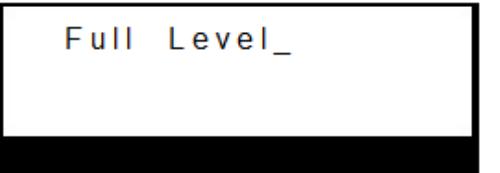set and lock the newly changed value		< >	
Exit and return to the Remote Menu		< >	
Repeat for configuring any Parameter in Event Settings			